



Included in box

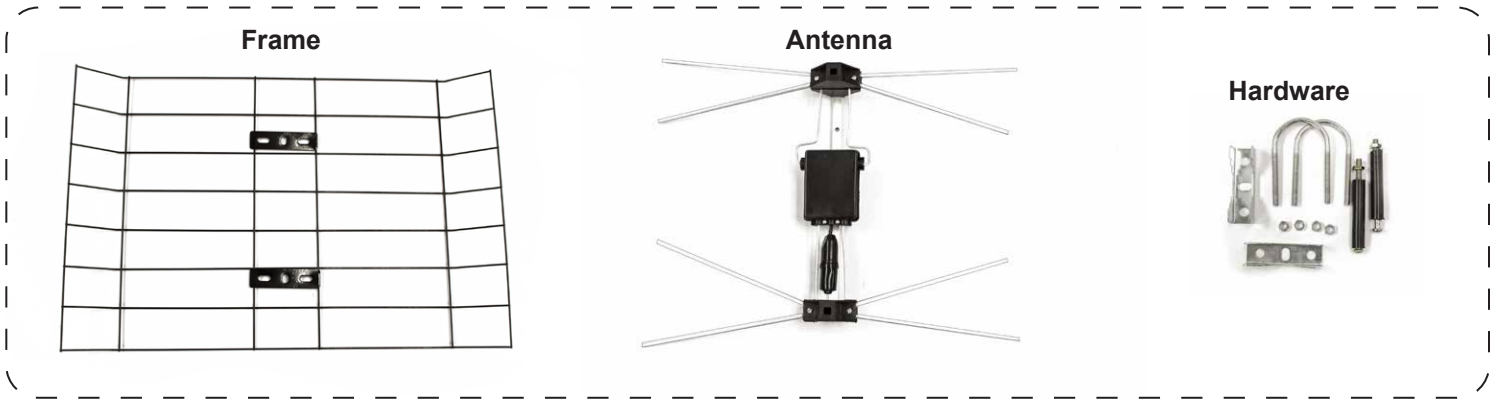

Getting Started 1 - mount using your hardware to attic frame or side of house

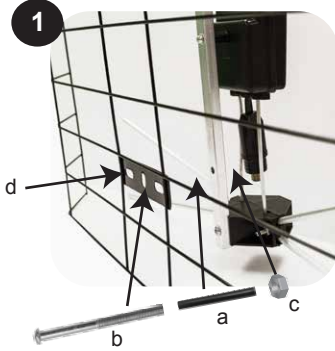


Mount using your screws to attic frame or side of house

- a - Place spacer between frame and antenna
- b - Insert screw from outside frame through hole as shown, and then through spacer
- c - Attach nut onto screw behind antenna

Attach to side of house or attic support beam using your screws (not included) through support holes (d) into solid wood of house. Do not attach to sheet rock or house element that is not solid or that cannot support the weight of this antenna.

Repeat for top screw


Getting Started 2 (alternate)- mount using included hardware to pole (pole not included)

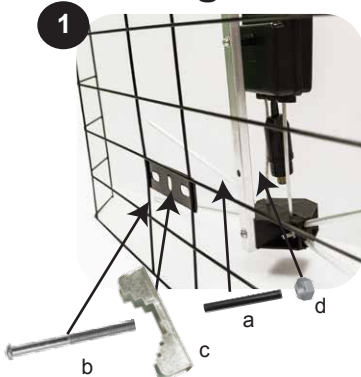

I - Mount frame to antenna

- a - Place spacer between frame and antenna
- b - Insert screw from outside frame through pole bracket (c) as shown, then through hole in frame, then through spacer
- d - Attach nut onto screw behind antenna


Repeat for top screw

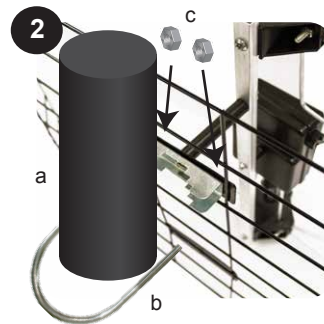

II - Mount antenna to pole

- a - Place antenna up against securely mounted pole
- b - Push pole u-bolt around pole and through holes in bracket
- d - Attach u-bolt to antenna using included screws (x2)

Connect antenna to your TV

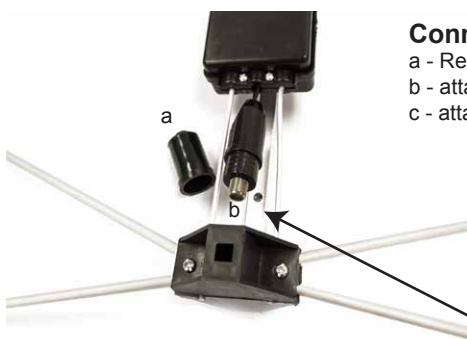

Connect antenna to TV using a coax cable

- a - Remove coax protective cap from the coax line out connector
- b - attach 1 side of coax cable (not included) to the antenna's coax line-out connector
- c - attach the other side of the coax cable to your TV's line-in jack

